

FOR MORE INFO & HELPFUL TIPS, VISIT:
www.clikit.ca

MAGIC MESH[®]

HANDS-FREE SCREEN DOOR **DELUXE**


Hands-Free Screen Door Installation Instructions

IMPORTANT: Before hanging, ensure that the surface is clean of dirt and debris.


SINGLE DOORS:

Determine the proper direction to install the screen:


- If your door opens IN, install on the OUTSIDE of the door frame.
- If your door opens OUT, install on the INSIDE of the door frame.

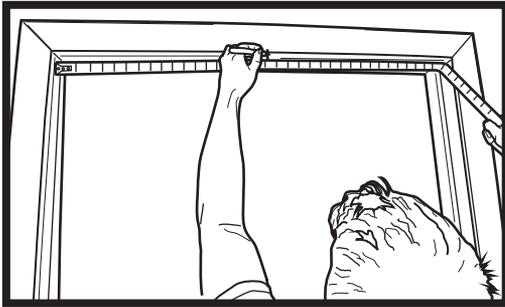

1. Find and mark the center of the top of your door frame.

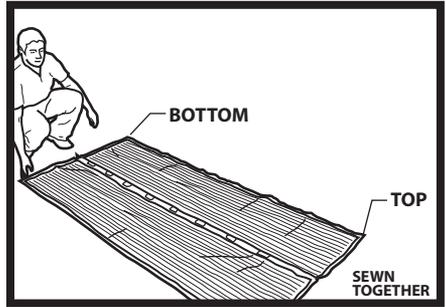



2. Lay your Magic Mesh[®] Screen flat on the floor with the magnets aligned in the center. **Note:** The top of the panel will have a larger gap between the magnets and the trim versus the bottom of the panel. The top strip of the panel is where side **A** and **B** are sewn together.

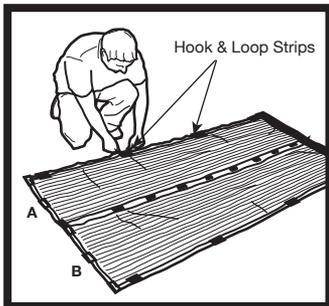

3. Peel the adhesive backing off of the hook and loop strips and apply to the Magic Mesh[®] Screen according to FIGURE 1.


Note: Hook and Loop #5 is split into two separate strips

FIGURE 1

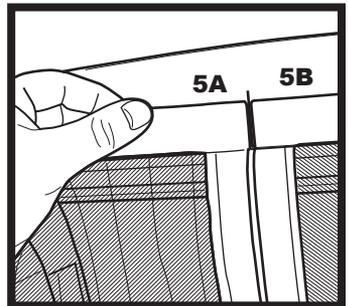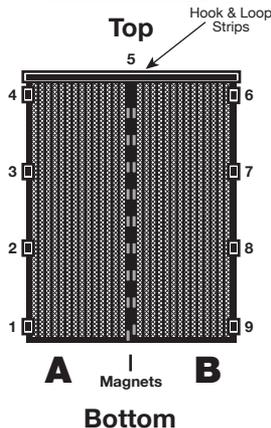

4. Peel off 1/2 adhesive backing of hook and loop strips then apply them to the door frame one at a time with pressure. Hold for 30 seconds.

Note: Be sure to hang the screen high enough so that it does not drag on the ground.

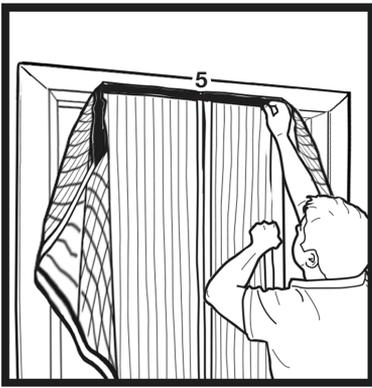


5. Place the remaining length of hook and loop strip #5.
Note: Be sure to hang the screen high enough so that it does not drag on the ground.



6. Attach the rest of the hook and loop strips row by row: #1-4 and #6-9. Figure 2



Figure 2

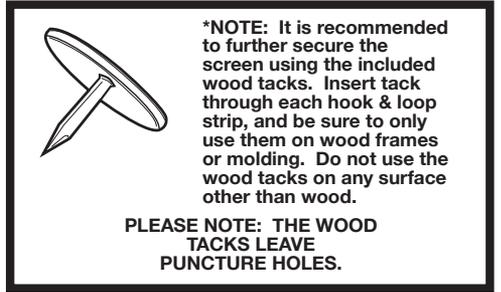

***NOTE:** It is recommended to further secure the screen using the included wood tacks. Insert tack through each hook & loop strip, and be sure to only use them on wood frames or molding. Do not use the wood tacks on any surface other than wood.

PLEASE NOTE: THE WOOD TACKS LEAVE PUNCTURE HOLES.

FOR MORE INFO & HELPFUL TIPS, VISIT:
www.clikit.ca

Cleaning and Storage:

Do not use any harsh abrasive cleaners on this product. Wipe off the mesh with a damp, lukewarm cloth. For stubborn dirt, you can spot clean with a small amount of soap and a cloth. Allow the mesh to air-dry. Do not put in a dryer. Do not dry clean.

Important Safety Instructions


Keep children away from the packaging material and the storage bag. There is danger of suffocation. Maintain an adequate distance from heat sources such as stove tops, ovens, or BBQ grills. Because of possible electromagnetic interference, people with implanted medical devices (e.g. pace makers) should consult their doctor before using. Take extra caution when using wood tacks. Keep away from children. Product may not function properly if not installed correctly.

IMPORTANT: Before hanging, ensure that the surface is clean of dirt and debris.


SLIDING DOORS:

Important:

For sliding doors, attach the screen to the OUTSIDE of the door frame and to the STATIONARY DOOR. Removing the sliding screen door may be required if your doorway opening is less than 91.4 cms (36 inches).

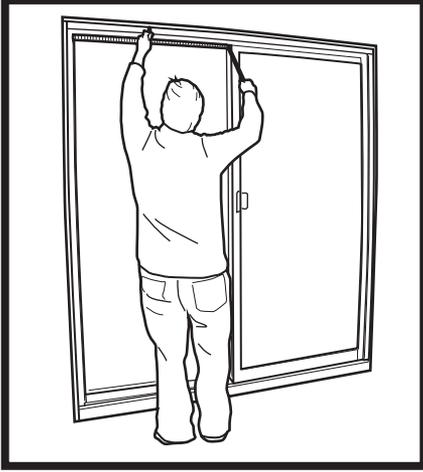


1. Find and mark the center point of the top of the opening door. Measure the opening of the doorway. **Note:** If the opening is less than 91.4 cms (36 inches), we suggest removing the sliding screen door.

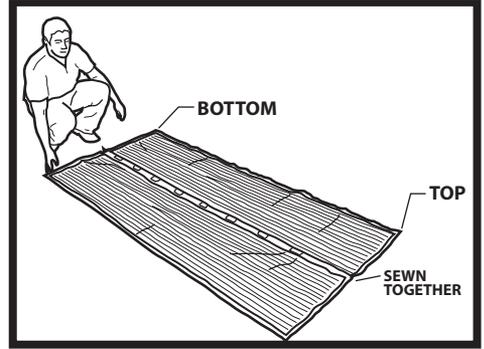


2. Lay your Magic Mesh® Screen flat on the floor with the magnets aligned in the center. **Note:** The top of the panel will have a larger gap between the magnets and the trim versus the bottom of the panel. The top strip of the panel is where side A and B are sewn together.


FIGURE 1

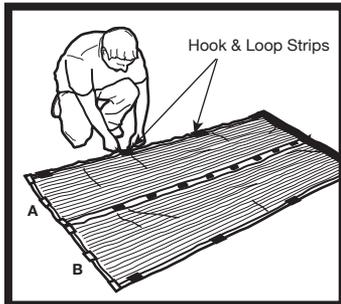


3. Peel the adhesive backing off of the hook and loop strips and apply to the Magic Mesh® Screen according to FIGURE 1. **Note:** Hook and Loop #5 is split into two separate strips

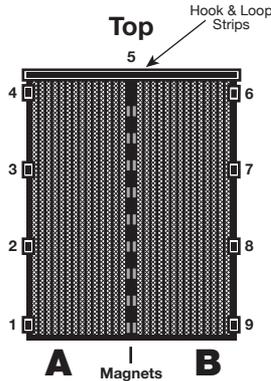

Bottom

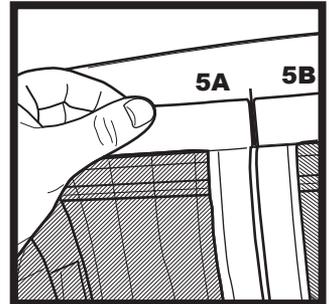

4. Peel off 1/2 adhesive backing of hook and loop strips then apply them to the door frame one at a time with pressure. Hold for 30 seconds. **Note:** Be sure to hang the screen high enough so that it does not drag on the ground.

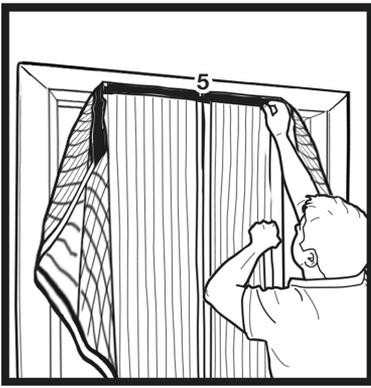

5. Place the remaining length of hook and loop strip #5.
Note: Be sure to hang the screen high enough so that it does not drag on the ground.



6. Attach the rest of the hook and loop strips row by row: #1-4 and #6-9. Figure 2


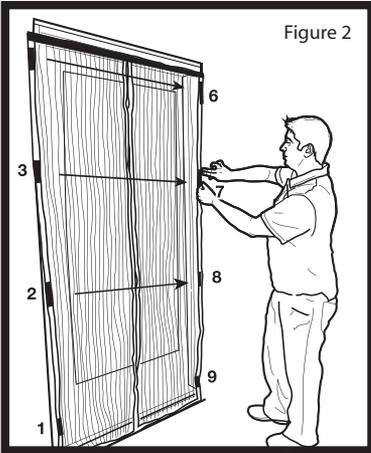


Figure 2

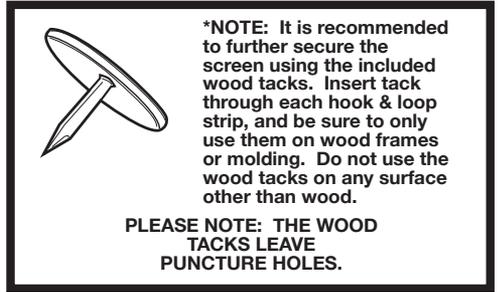

***NOTE:** It is recommended to further secure the screen using the included wood tacks. Insert tack through each hook & loop strip, and be sure to only use them on wood frames or molding. Do not use the wood tacks on any surface other than wood.

PLEASE NOTE: THE WOOD TACKS LEAVE PUNCTURE HOLES.

FOR MORE INFO & HELPFUL TIPS, VISIT:
www.clikit.ca

Helpful Tips & Troubleshooting:

Do not attempt to attach the wood tacks to glass, vinyl, or aluminum siding or to the door/door frame. They should only be used for wooden frames or walls.

Cleaning and Storage:

- Do not use any harsh abrasive cleaners on this product.
- Wipe off the mesh with a damp, lukewarm cloth. For stubborn dirt, you can spot clean with a small amount of soap and a cloth. Allow the mesh to air-dry.
- Do not put in a dryer. Do not dry clean.

Important Safety Instructions

- Keep children away from the packaging material and the storage bag. There is danger of suffocation.
- Maintain an adequate distance from heat sources such as stove tops, ovens, or BBQ grills.
- Because of possible electromagnetic interference, people with implanted medical devices (e.g. pace makers) should consult their doctor before using.
- Take extra caution when using wood tacks. Keep away from children.
- Product may not function properly if not installed correctly.

©2018 APG
 All Rights Reserved.
 Magic Mesh is a registered trademark of APG.

Distributed By:
 Supertek Canada inc,
 Mont-Royal, QC, H4G 1X2
www.clikit.ca
 Customer Service: 1-800-304-8354