



**LIMITATION OF LIABILITY**

Liability limited to the purchase price of this product. Supertek Canada Inc. shall not be liable for any incidental or consequential damages or any implied warranty on this product.

Distributed by  
Supertek Canada Inc.  
Mont-Royal, QC H4T 1X2  
©2022 DaVinci CSJ, LLC  
www.clikit.ca

Customer Service:  
client@supertek.ca  
1-800-304-8354

Product may vary from images shown.  
US and Worldwide Patents Pending.

BACK



# RUBY® MonkeyMagnets™



**IMPORTANT SAFETY INSTRUCTIONS, READ AND FOLLOW ALL WARNINGS AND INSTRUCTIONS BEFORE USING THIS PRODUCT. Injury or damage to property can result from improper use. SAVE THESE INSTRUCTIONS.**

PRODUCT MAY VARY FROM IMAGES SHOWN

FRONT

### ⚠ WARNING

- Choking Hazard - Small Parts. Keep away from children. This product is not a toy.
- **THIS PRODUCT CONTAINS A SMALL MAGNET:** Swallowed magnets can stick together across intestines causing serious infection and death. Seek immediate medical attention if magnet is swallowed or inhaled.
- Do not use in wet or damp locations.
- Do not exceed the weight limit of 2 kg (4.4 lbs).

### PACKAGE INCLUDES


(8) 2-Piece RUBY® Monkey Magnets™, 32 Mounting Screws, 16 pcs Mounting Peel & Stick Tape

### PRODUCT MATERIALS

Metal Plates and Screws: Iron with Nickel Plating  
Magnet: Neodymium Magnet  
Mounting Tape: Two-Sided Adhesive Tape

### PARTS

Each RUBY® Monkey Magnets™ Set consists of: (1) Strike Plate and (1) Magnetic Base




### INSTALLATION


#### RUBY® MONKEY MAGNETS™ CAN EASILY BE INSTALLED 2 WAYS.

#### OPTION 1: SCREW INSTALLATION (Recommended for wood only)


1. Mark the installation location of both the magnetic base plate and the strike plate to ensure they align when the door, drawer, or cabinet is closed.  
**Note:** Logo should face out.

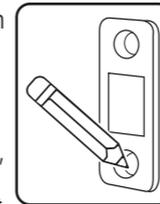


2. Drill pilot holes about the length of each screw at the pencil marks for magnetic base and strike plates.

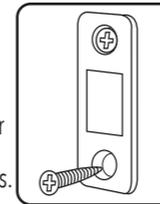

3. Screw the magnetic base and strike plate with screwdriver, ensuring that logo faces out.

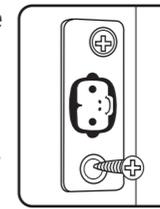

4. Bring magnets together to confirm that they hold together. Adjust as needed.

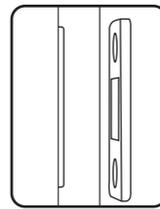


#### OPTION 2: ADHESIVE INSTALLATION


1. Clean the surfaces of the base plate, strike plate and areas where you intend to stick them with rubbing alcohol. Allow to dry.




2. Bring magnets together and mark with pencil where both the base plate and strike plate should be placed.

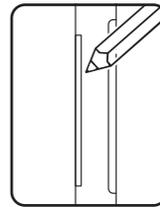


3. Peel off one side of tape adhesive, and stick to back of base and strike plates. Press the tape down hard, removing any air bubbles. Wait a minimum of 30 minutes.

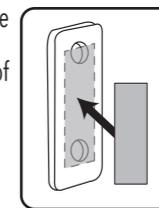

4. Peel off other side of tape adhesive and press firmly for at least 30 seconds in order to make sure the adhesive sticks well to surface.

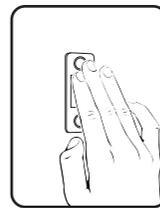

5. Let the adhesive tape cure for at least 24 hours before testing the closure strength.

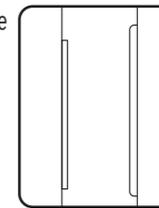

6. To remove, apply heat with hair dryer to tape for about 1 minute. Then peel slowly off. If still too stuck, using caution, use a single edge razor blade or dental floss under the edge of the tape to detach.

**Warning: Removing adhesive tape may damage surface. May damage drywall.**